

oneM2M	
Technical	${\bf Specification}$

Document Number Document Name:

Date: Abstract:

$\begin{array}{l} {\rm one M2M} \\ {\rm Technical~Specification} \end{array}$

 $\begin{array}{l} {\rm TS\text{-}0006\text{-}V4.0.1} \\ {\rm Management\ enablement\ (BBF)} \\ 2024\text{-}11\text{-}10 \end{array}$

Specifies the usage of the BBF TR-069 protocol and the corresponding message flows including normal cases as well as error cases to fulfil the oneM2M management requirements. Protocol mapping between the oneM2M service layer and BBF TR-069 protocol. The Mca reference point, ms interface and la interface are possibly involved in this protocol mapping.

Mapping between the oneM2M management related resources and the TR-069 protocol RPCs and TR-181i2 data model.

Specification of new TR-181 data model elements to fulfil oneM2M specific management requirements that cannot be currently translated.

oneM2M	oneM2M
Technical Specification	Technical Specification
Template Version: January 2017 (Do not modify)	Template Version: January 2017 (Do not modify)

The present document is provided for future development work within one M2M only. The Partners accept no liability for any use of this specification.

The present document has not been subject to any approval process by the oneM2M Partners Type 1. Published oneM2M specifications and reports for implementation should be obtained via the oneM2M Partners' Publications Offices.

About oneM2M

The purpose and goal of one M2M is to develop technical specifications which address the need for a common M2M Service Layer that can be readily embedded within various hardware and software, and relied upon to connect the myriad of devices in the field with M2M application servers worldwide.

More information about one M2M may be found at: http://www.oneM2M.org

Copyright Notification

(c) 2019, oneM2M Partners Type 1 (ARIB, ATIS, CCSA, ETSI, TIA, TSDSI, TTA, TTC).

All rights reserved.

The copyright extends to reproduction in all media.

Notice of Disclaimer & Limitation of Liability

The information provided in this document is directed solely to professionals who have the appropriate degree of experience to understand and interpret its contents in accordance with generally accepted engineering or other professional standards and applicable regulations. No recommendation as to products or vendors is made or should be implied.

NO REPRESENTATION OR WARRANTY IS MADE THAT THE INFORMATION IS TECHNICALLY ACCURATE OR SUFFICIENT OR CONFORMS TO ANY STATUTE, GOVERNMENTAL RULE OR REGULATION, AND FURTHER, NO REPRESENTATION OR WARRANTY IS MADE OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. NO oneM2M PARTNER TYPE 1 SHALL BE LIABLE, BEYOND THE AMOUNT OF ANY SUM RECEIVED IN PAYMENT BY THAT PARTNER FOR THIS DOCUMENT, WITH RESPECT TO ANY CLAIM, AND IN NO EVENT SHALL oneM2M BE LIABLE FOR LOST PROFITS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. oneM2M EXPRESSLY ADVISES

ANY AND ALL USE OF OR RELIANCE UPON THIS INFORMATION PROVIDED IN THIS DOCUMENT IS AT THE RISK OF THE USER.

Contents

- 1 Scope
- 2 References
 - 2.1 Normative references
 - 2.2 Informative references
- 3 Definitions of terms and abbreviations
 - $3.1 \, \mathrm{Terms}$
 - 3.2 Abbreviations
- 4 Conventions
- 5 Mapping of basic data types
- 6 Mapping of identifiers
 - 6.0 Introduction
 - 6.1 Mapping of Device identifiers to the Node Resource
 - 6.2 Identifier of an object instance
- 7 Mapping of resources
 - 7.0 Introduction
 - 7.1 General mapping assumptions
 - 7.1.0 Introduction
 - 7.1.1 Mapping of Device Identifiers
 - 7.1.2 Mapping of Embedded Devices
 - 7.2 Resource [deviceInfo]
 - 7.3 Resource [memory]
 - 7.4 Resource [battery]
 - 7.5 Resource [areaNwkInfo]
 - 7.6 Resource [areaNwkDeviceInfo]
 - 7.7 Resource [eventLog]
 - 7.8 Resource [deviceCapability]
 - 7.9 Resource [firmware]
 - 7.10 Resource [software]
 - 7.11 Resource [reboot]
 - 7.12 Resource [cmdhPolicy]
 - 7.12.0 Introduction
 - 7.12.1 Resource [activeCmdhPolicy]
 - 7.12.2 Resource [cmdhDefaults]
 - 7.12.3 Resource [cmdhDefEcValue]
 - 7.12.4 Resource [cmdhEcDefParamValues]
 - 7.12.5 Resource [cmdhLimits]
 - 7.12.6 Resource [cmdhNetworkAccessRules]
 - 7.12.7 Resource [cmdhNwAccessRule]
 - 7.12.8 Resource [cmdhBuffer]
 - 7.13 Resource Type <mgmtCmd>

- 7.14 Resource Type < execInstance >
- 7.15 Resource [registration]
- 7.16 Resource [dataCollection]
- 7.17 Security Solutions
 - 7.17.1 Introduction
 - 7.17.2 Resource [authenticationProfile]
 - 7.17.3 Resource [trustAnchorCred]
 - 7.17.4 Resource [myCertFileCred]
 - 7.17.5 Resource [MAFClientRegCfg]
 - 7.17.6 Resource [MEFClientRegCfg]
- 8 Mapping of procedures for management
 - 8.0 Introduction
 - 8.1 Resource Type <mgmtObj> primitive mappings
 - 8.1.0 Introduction
 - 8.1.1 Alias-Based Addressing Mechanism
 - 8.1.2 Create primitive mapping
 - 8.1.2.0 Introduction
 - 8.1.2.1 M2M Service Layer Resource Instance Identifier mapping
 - 8.1.3 Delete primitive mapping
 - 8.1.3.1 Delete primitive mapping for deletion of Object Instances
 - 8.1.3.2 Delete primitive mapping for software un-install operation
 - 8.1.4 Update primitive mapping
 - 8.1.4.1 Update primitive mapping for Parameter modifications
 - 8.1.4.2 Update primitive mapping for upload file transfer operations
 - 8.1.4.3 Update primitive mapping for download file transfer operations
 - 8.1.4.4 Update primitive mapping for reboot operation
 - 8.1.4.5 Update primitive mapping for factory reset operation
 - 8.1.4.6 Update primitive mapping for software install operation
 - 8.1.5 Retrieve primitive mapping
 - 8.1.6 Notify primitive mapping
 - 8.1.6.0 Introduction
 - 8.1.6.1 Procedure for subscribed Resource attributes.
 - 8.1.6.2 Notification primitive mapping
 - 8.2 <mgmtCmd> and <execInstance> resource primitive mappings
 - 8.2.1 Update (Execute) primitive for the <mgmtCmd> resource
 - 8.2.1.0 Introduction
 - 8.2.1.1 Execute File Download
 - 8.2.1.2 Execute File Upload Operations
 - 8.2.1.3 Report Results using TransferComplete RPC
 - 8.2.1.4 Execute Software Operations with ChangeDUState RPC
 - 8.2.1.5 Report Results with ChangeDUStateComplete RPC
 - 8.2.1.6 Execute Reboot operation
 - 8.2.1.7 Execute Factory Reset operation
 - 8.2.2 Delete <mgmtCmd> resource primitive mapping
 - 8.2.3 Update (Cancel) < execInstance > primitive mapping
 - 8.2.4 Delete < execInstance > primitive mapping

- 8.3 Resource [myCertFileCred] primitive mappings
 - 8.3.1 Introduction
 - 8.3.2 Creation of Resource [myCertFileCred]
 - 8.3.2.1 Introduction
 - 8.3.2.2 Procedure for creation of Resource [myCertFileCred]
- 9 Server Interactions
 - 9.0 Introduction
 - 9.1 Communication Session Establishment
 - 9.1.1 IN-CSE to ACS Communication Session Establishment
 - 9.1.2 ACS to IN-CSE Communication Session Establishment
 - 9.1.3 ACS and IN-CSE Communication Session Requirements
 - 9.2 Processing of Requests and Responses
 - 9.2.1 Request and Notification Formatting
 - 9.2.2 ACS Request Processing Requirements
 - 9.2.3 ACS Notification Processing Requirements
 - 9.3 Discovery and Synchronization of Resources
 - 9.4 Access Management
 - 9.4.0 Introduction
 - 9.4.1 Access Management Requirements
- 10 New Management Technology Specific Resources History

1 Scope

The present document describes the protocol mappings between the management Resources for one M2M and the BBF TR-181 Data Model [6].

2 References

2.1 Normative references

References are either specific (identified by date of publication and/or edition number or version number) or nonspecific. For specific references, only the cited version applies. For non-specific references, the latest version of the referenced document (including any amendments) applies.

The following referenced documents are necessary for the application of the present document.

- [1] oneM2M TS-0001: "Functional Architecture".
- [2] oneM2M TS-0004: "Service Layer Core Protocol Specification".
- [3] oneM2M TS-0011: "Common Terminology".
- [4] BBF: "TR-069 CPE WAN Management Protocol", Issue: 1 Amendment 5, November 2013.
- [5] BBF: "TR-106 Data Model Template for TR-069-Enabled Devices", Issue 1, Amendment 7, September 2013.

- [6] BBF: "TR-181 Device Data Model for TR-069, Issue 2 Amendment 11", July 2016.
- [7] BBF: "TR-131 ACS Northbound Interface Requirements, Issue:1", November 2009.
- [8] oneM2M TS-0022: "Field Device Configuration".

2.2 Informative references

References are either specific (identified by date of publication and/or edition number or version number) or nonspecific. For specific references, only the cited version applies. For non-specific references, the latest version of the referenced document (including any amendments) applies.

The following referenced documents are not necessary for the application of the present document but they assist the user with regard to a particular subject area.

• [i.1] oneM2M Drafting Rules. > NOTE: Available at http://www.onem2m.org/images/files/oneM2M-Drafting-Rules.pdf.

3 Definitions of terms and abbreviations

3.1 Terms

For the purposes of the present document, the terms given in TS-0011 [3] and the following apply:

CPE Proxier: CPE that is capable of proxying the communication between an ACS and a Proxied Device as defined in TR-069 [4]

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TS-0011 [3] and the following apply:

```
ACS
        Auto-Configuration Server
ADN
        Application Dedicated Node
        Application Entity
ΑE
ASN
        Application Service Node
BBF
        BroadBand Forum
CMDH
        Communication Management and Delivery Handling
CPE
        Customer Premise Equipment
        Common Services Entity
CSE
CWMP
        CPE WAN Management Protocol
DM
        Device Management
DU
        Deployment Unit
IN-CSE CSE which resides in the Infrastructure Node
LAN
        Local Area Network
```

MAF M2M Authentication Function MN Middle Node Organizationally Unique Identifier OUI PCProduct Class RPC Remote Procedure Call SNSerial Number UPA Universal Powerline Association URI Uniform Resource Identifier URL Uniform Resource Locator USB Universal Serial Bus UUID Universal Unique IDentifier XMLExtensible Markup Language

4 Conventions

The key words "Shall", "Shall not", "May", "Need not", "Should", "Should not" in the present document are to be interpreted as described in the oneM2M Drafting Rules [i.1].

5 Mapping of basic data types

TR-106 [5] specifies the object structure supported by TR-069 enabled devices and specifies the structural requirements for the data hierarchy. This clause includes the mapping attribute data types to TR-181 [6] parameters which follows the conventions of section 3 of TR-106 [5] and data types described in Table 4 of TR-106 [5].

Table 2: Table 5-1: Data Type Mapping

oneM2M Data Types	Mapping to data types in TR-106	Conversion Notes
xs:boolean	boolean	26
xs:string	string	Mapping is constrained to the size of the string
xs:unsignedInt	${\it unsignedInt}$	
xs:unsignedLong	unsignedLong	
xs:integer	long	Mapping is constrained to the size of the long data type.
Xs: positive Integer	${\it unsignedLong}$	Mapping is constrained to a lower limit of 1 and the size of the unsignedLong data type.

oneM2M Data Types	Mapping to data types in TR-106	Conversion Notes
Xs:nonNegativeInteger	unsigned Long	Mapping is constrained the size of the unsignedLong data type.
Comma separated Lists	Comma separated Lists	Data structure is represented by comma separated list as described in section 3.2.3 of TR-106 [5].

In some instances the conversion of the contents between data types will cause an error to occur (e.g. xs:integer to long). When an error occurs in the conversion of a data type, the 4000 (BAD REQUEST) response status code shall be given.

6 Mapping of identifiers

6.0 Introduction

The TR-069 [4] specification defines three (3) types of devices, known as CPEs, that are capable of being managed from the perspective of the TR-069 agent:

- CPE that hosts the TR-069 agent: Section A.3.3.1 Inform of TR-069 [4] defines the required fields for a CPE to be identified. These fields include the OUI and Serial Number of the CPE assigned by the CPE manufacturer. Optionally the manufacturer may assign a Product Class to the CPE. The format of the identifier is as follows: OUI-[PC-]SN.
- Virtual Device: This type of device is addressed as a CPE. The Virtual Device has its own OUI-[PC-]SN as represented by the CPE Proxier. The CPE Proxier emulates a CWMP agent for each Virtual Device.
- Embedded Device: This type of device is addressed as one or more objects within the data model of the CPE that hosts the TR-069 agent.

6.1 Mapping of Device identifiers to the Node Resource

Node Resources are identified for each instance of an ADN, ASN and MN node and are identified using the M2M Node Identifier (M2M-Node-ID) defined in the oneM2M Functional [1].

CPE Device identifiers shall map to the nodeID attribute of the <node> resource. The CPE Device identifiers are obtained from the contents of the following attributes:

- Device.DeviceInfo.ManufacturerOUI
- Device.DeviceInfo.ProductClass
- Device.DeviceInfo.SerialNumber

Virtual Device identifiers shall map to the nodeID attribute of the <node>resource. The Virtual Device identifiers are obtained from the CPE Proxier using the contents of the attributes:

- Device.ManagementServer.VirtualDevice.{i}.ManufacturerOUI
- Device.ManagementServer.VirtualDevice.{i}.ProductClass
- Device.ManagementServer.VirtualDevice.{i}.SerialNumber

Embedded Device identifiers shall map to the nodeID attribute of the <node>resource. The Embedded Device identifiers are obtained using the containing CPE Device or Virtual Device identifiers along with the contents of the attributes of the:

- Device.ManagementServer.EmbeddedDevice.{i}.ControllerID
- $\bullet \quad Device. Management Server. Embedded Device. \{i\}. Proxied Device ID$

6.2 Identifier of an object instance

The TR-069 [4] specification permits objects to have multiple object instances where each object instance is contained within the objectPath attribute of the Resource within the context of the Resource's objectId as defined in clause 7.1.

In order to allow the AE or CSE that originated the request that manipulates a Resource to easily align the M2M Service Layer with the Resource's external technology identifier, the value of the object instance "{i}" should be a part of the identifier of the Resource in the M2M Service Layer where possible. For example if the [areaNetwork] resource has an object instance identifier of "Device.X_oneM2M_org_CSE.1.M2MareaNetworkDevice.[foo]" then the M2M Service Layer Resource should be identified using the object instance of the underlying technology (e.g. "/foo" for the Resource areaNetwork).

7 Mapping of resources

7.0 Introduction

This clause contains all information on how to map management resources from TS-0004 [2] to managed objects and parameters as defined in the TR-181 [6] data model or the Remote Procedure Calls (RPCs) in TR-069 [4].

7.1 General mapping assumptions

7.1.0 Introduction

TR-069 [4] specifies a protocol for communication between a CPE (Customer Premises Equipment) and an ACS (Auto-Configuration Server). Any TR-069 enabled device has to follow the data model as described in the TR-106 [5] and TR181 [6] as well as RPCs described in TR-069 [4].

As TR-181 [6] is the model that the Resources are mapped, all Resources shall have the objects of the TR-181 [6] namespace (e.g. "urn:broadband-forum-org:tr-181-2-7-0").

7.1.1 Mapping of Device Identifiers

The Device identifiers for CPEs are mapped to the Resource Types [deviceInfo].

For CPE and Virtual Devices map their Device Identifiers (OUI-[PC-]SN) to the manufacturer, deviceType and deviceLabel attributes of the Resource [device-Info].

For Embedded Devices, the ControllerID and ProxiedDeviceID parameters of the Device.ManagementServer.EmbeddedDevice.{i} object instance are mapped to the deviceLabel attribute of the Resource [deviceInfo] as a comma separated list: "Device.ManagementServer.EmbeddedDevice.{i}.ControllerID, Device.ManagementServer.EmbeddedDevice.{i}.ProxiedDeviceID".

7.1.2 Mapping of Embedded Devices

The TR-181 [6] specification does not provide a mechanism where Embedded Devices provide information related to the Device. DeviceInfo objects and sub-objects. Instead the TR-181 [6] provides this information in a manner that is reliant on the Embedded Device's underlying technology (e.g. ZigBee(R), UpnP).

As such the mapping of the [memory] and [battery] Resources are implementation specific for each underlying technology and is outside the scope of the present document.

7.2 Resource [deviceInfo]

The Resource [deviceInfo] is a read-only Resource that shall map to the Device.DeviceInfo object of TR-181 [6] for CPE and Virtual Devices.

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

NOTE: The SerialNumber, ModelNumber, ProductClass attributes for a Virtual device are the same values as the Device.ManagementServer.VirtualDevice.{i} object in the CPE Proxier.

Table 3: Table 7.2-1: Resource [deviceInfo] for CPE and Virtual Devices

Attribute Name of [deviceInfo]	BBF TR-181 [6] Parameter
deviceLabel manufacturer	Device.DeviceInfo.SerialNumber Device.DeviceInfo.Manufacturer
model	Device.DeviceInfo.ModelNumber

Attribute Name of [deviceInfo]	BBF TR-181 [6] Parameter
deviceType fwVersion	Device.DeviceInfo.ProductClass Device.DeviceInfo.SoftwareVersion if the device supports only 1 software version. If the device support multiple software versions this shall map to De- vice.DeviceInfo.AdditionalSoftwareVersio
swVersion hwVersion	Device.DeviceInfo.SoftwareVersion Device.DeviceInfo.HardwareVersion

Table 4: Table 7.2-2: Resource [deviceInfo] for Embedded Devices

Attribute Name of [deviceInfo]	BBF TR-181 [6] Parameter
deviceLabel	Comma separated list: "De-
	vice.ManagementServer.EmbeddedDevice.{i}.ControllerID,
	De-
	$vice. Management Server. Embedded Device. \{i\}. Proxied Device ID$
manufacturer	No mapping available
model	No mapping available
deviceType	No mapping available
fwVersion	No mapping available
swVersion	No mapping available
hwVersion	No mapping available

7.3 Resource [memory]

The Resource [memory] is a read-only Resource that shall map to the Device.DeviceInfo.MemoryStatus object of TR181 [6] for CPE and Virtual Devices.

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

Attempts to modify the attributes of the memory Resource causes an error code "operation unsupported" to be returned.

Table 5: Table 7.3-1: Resource [memory]

Attribute Name of [memory]	BBF TR-181 [6] Parameter
memAvailable memTotal	${ \begin{tabular}{l} Device. DeviceInfo. Memory Status. Free \\ Device. DeviceInfo. Memory Status. Total \end{tabular} }$

7.4 Resource [battery]

The Resource [battery] is a read-only Resource that shall map to an instance of Device.DeviceInfo.X_oneM2M_org_BatteryStatus.Battery.{i} object for CPE and Virtual Devices.

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

Table 6: Table 7.4-1: Resource [battery]

Attribute Name of [battery]	BBF TR-181 [6] Parameter
batteryLevel batteryStatus	$\label{lem:condition} Device.DeviceInfo.X_oneM2M_org_BatteryStatus.Battery.\{i\}.Level\\ Device.DeviceInfo.X_oneM2M_org_BatteryStatus.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.\{i\}.Status.Battery.Battery.B$

7.5 Resource [areaNwkInfo]

The Resource [areaNwkInfo] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_oneM2M_org_CSE. $\{i\}$. M2MareaNetwork. $\{i\}$ object.

As the Resource [areaNwkInfo] is a multi-instance Resource, the M2MareaNetwork object is a multi-object instance that can be created and deleted.

The M2MareaNetwork instance shall be created using the Add Object RPC of TR-069 [4].

The M2MareaNetwork instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of an M2MareaNetwork shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of an M2MareaNetwork shall be modified using the SetParameterValues RPC of TR-069 [4].

Table 7: Table 7.5-1: Resource [areaNwkInfo]

Attribute Name of [areaNwkInfo]	X_oneM2M_org Parameter
areaNwkType	Device.X_oneM2M_org_CSE.{i}.M2MareaNetwork.{i}.Type
listOfDevices	Device.X_oneM2M_org_CSE.{i}.M2MareaNetwork.{i}.ListOfDevices

$7.6 \ Resource \ [areaNwkDeviceInfo]$

The Resource [areaNwkDeviceInfo] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_oneM2M_org_CSE. $\{i\}$. AreaNetworkDevice. $\{i\}$ object.

As the Resource [areaNwkDeviceInfo] is a multi-instance Resource, the AreaNetworkDevice object is a multi-object instance that can be created and deleted.

Instances of the Resource [areaNwkDeviceInfo] are referenced in the listOfDevices attribute of the associated Resource [areaNwkInfo].

The M2MareaNetworkDevice instance shall be created using the Add Object RPC of TR-069 [4].

The M2MareaNetworkDevice instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of an M2MareaNetworkDevice shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of an M2MareaNetworkDevice shall be modified using the SetParameterValues RPC of TR-069 [4].

Table 8: Table 7.6-1: Resource [areaNwkDeviceInfo]

Attribute Name of [areaNwkDeviceInfo]	X_oneM2M_org Parameter
devId	Device.X_oneM2M_org_CSE.{i}.M2MareaNetworkDevice.{i}.Host
devType	Device.X_oneM2M_org_CSE.{i}.M2MareaNetworkDevice.{i}.Type
areaNwkId	Reference to De-
	$vice. X_oneM2M_org_CSE. \{i\}. M2MareaNetworkDevice. \{i\}. M2MareaNetworkDev$
sleepInterval	$Device. X_one M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Sleep Interpretation of the property of the p$
sleepDuration	$Device. X_one M2 M_org_CSE. \\ \{i\}. M2 Marea Network Device. \\ \{i\}. Sleep D$
status	$Device. X_one M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Status$
listOfNeighbors	$Device. X_one M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. Neighborston M2 M_org_CSE. \{i\}. M2 Marea Network Device. \{i\}. M2 $

7.7 Resource [eventLog]

The Resource [eventLog] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. DeviceInfo. X_oneM2M_org_Diagnostics. EventLog. $\{i\}$ object.

The EventLog instance shall be created using the Add Object RPC of TR-069 [4].

The EventLog instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of an EventLog instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of an EventLog instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 9: Table 7.7-1: Resource [eventLog]

Attribute Name of [eventLog]	BBF TR-181 [6] Parameter
logTypeId	Device.DeviceInfo.X_oneM2M_org_Diagnostics.EventLog.{i}.Type
logData	Device.DeviceInfo.X_oneM2M_org_Diagnostics.EventLog.{i}.Data
logStatus	Device.DeviceInfo.X_oneM2M_org_Diagnostics.EventLog.{i}.Status
logStart	Set to "True", the De-
	vice.DeviceInfo.X_oneM2M_org_Diagnostics.EventLog.{i}.Enable parameter is set to "True".
$\log \operatorname{Stop}$	Set to "True", the De-
<u> </u>	vice.DeviceInfo.X_oneM2M_org_Diagnostics.EventLog.{i}.Enable
	parameter is set to "False".

7.8 Resource [deviceCapability]

The Resource [deviceCapability] represents a capability of device that can be administratively enabled or disabled. The lists of capabilities that are managed are defined in the enumeration of the capabilityName attribute. TR-181 [6] data model defines a subset of capabilities listed in the deviceCapability enumeration. The supported device capabilities within TR-181 [6] include:

- LAN Interfaces: USB, Wi-Fi, HomePlug, MoCA, UPA
- Hardware Capabilities: SmartCardReader

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The capabilities shall be enabled and disabled using the SetParameterValues RPC of TR-069 [4].

Table 10: Table 7.8-1: Resource [deviceCapability]

Attribute Name of [deviceCapability]	BBF TR-181 [6] Parameter
capabilityName	This attribute is fixed based on the value of the capabilityName attribute.
Attached	Returns "True"

Attribute Name of [deviceCapability]	BBF TR-181 [6] Parameter
capabilityActionStatus	Status is defined as:
	Success if the SetParameterValues
	RPC indicates that the operation was
	successful.
	Failure if the response to the
	SetParameterValues RPCs indicates
	that the operation failed.
	In process if the SetParameterValues
	RPC is initiated but the response to
	the SetParameterValues RPC has not
	been received.
currentState	USB: Device.USB.Interface.{i}.Enable
	Wi-Fi: Device.Wi-Fi.Radio.{i}.Enable
	HomePlug: De-
	vice.HomePlug.Interface.{i}.Enable
	MoCA:
	Device.MoCA.Interface.{i}.Enable
	UPA: Device.UPA.Interface.{i}.Enable
	SmartCardReader:
	$Device. Smart Card Readers. Smart Card Reader. \{i\}. Enable the control of the c$
enable	$USB:\ Device. USB. Interface. \{i\}. Enable$
	Wi-Fi: Device.Wi-Fi.Radio.{i}.Enable
	HomePlug: De-
	$vice. Home Plug. Interface. \{i\}. Enable$
	MoCA:
	Device.MoCA.Interface.{i}.Enable
	UPA: Device.UPA.Interface.{i}.Enable
	SmartCardReader:
	$Device. Smart Card Readers. Smart Card Reader. \{i\}. Enabled the control of the $
disable	Same parameter is used to disable a
	capability as the enable attribute.

7.9 Resource [firmware]

The Resource [firmware] represents a firmware instance and is not considered a TR-069 managed entity within the device until the firmware Resource's update attribute has been written a value of "True". When this occurs, the TR069 Download RPC shall be invoked.

NOTE: In many instances, the server from which the firmware is downloaded requires authentication in the form of Username and Password credentials. The CSE that executes firmware download shall maintain the mapping of the username and password of the download server needed to download the firmware outside the lifecycle

of the specific firmware.

Table 11: Table 7.9-1: Resource [firmware]

Attribute Name of [firmware]	RPC Download Arguments
URL	URL
update	When set to the value of "True"
r	executes the Download operations
	with a FileType "1 Firmware Upgrade
	Image" is performed.
	Username: Received from the CSE for
	the download server where the update
	is set to "True".
	Password: Received from the CSE for
	the download server where the update
	is set to "True".
	CommandKey: Automatically set by
	the CSE where the update is set to
	"True" in order to correlate the
	TransferComplete response.
	FileSize: 0 (not used)
	TargetFileName: <empty> (not used)</empty>
	DelaySeconds: 0 (immediate)
	SuccessURL: <empty> (not used)</empty>
	FailureURL: <empty> (not used)</empty>

7.10 Resource [software]

The Resource [software] is a multi-instance Resource where each instance of the Resource maps directly to an instance of Device.SoftwareModules.DeploymentUnit.{i} object for the deployment aspects (install, uninstall) of the Resource [software]. The install and uninstall operation of the Resource [software] is performed using a combination of the ChangeDUState and ChangeDUStateComplete RPCs.

Once a Resource [software] has been installed, the Resource shall be mapped to the associated Device. Software Modules. Execution Unit. $\{i\}$ objects in order to activate and deactivate the associated execution unit.

The Resource [software] version and name shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The activate and deactivate operations of the Resource [software] shall be performed by manipulating the Device.SoftwareModules.ExecutionUnit.{i}.RequestedState parameter using the SetParameterValues RPC.

NOTE: The Resource [software] provides support for only 1 Execution Unit per Deployment Unit. If a Deployment Unit is discovered by

the M2M Service Layer that contains multiple Execution Units for a Deployment Unit; only 1 Execution Unit is exposed. The selection of which Execution Unit is implementation specific.

Table 12: Table 7.10-1: Resource [software]

Attribute Name of [software]	Description
version	Device.SoftwareModules.DeploymentUnit.{i}.Version
name	Device.SoftwareModules.DeploymentUnit.{i}.Name
URL	Device.SoftwareModules.DeploymentUnit.{i}.URL
install	Use the
	ChangeDUState:InstallOpStruct
installStatus	Status is defined as:
	Success if the
	ChangeDUStateComplete RPC
	indicates that the operation was
	successful.
	Failure if the response to the
	ChangeDUState or
	ChangeDUStateComplete RPCs
	indicates that the operation failed.
	In process if the ChangeDUState RPC
	is initiated but the
	ChangeDUStateComplete RPC has
	not been received.
Activate	The action that activates software
	previously installed.
Deactivate	The action that deactivates software.
activeStatus	Status is defined as:
	Success if the SetParameterValues
	RPC indicates that the operation was
	successful.
	Failure if the response to the
	SetParameterValues RPCs indicates
	that the operation failed.
	In process if the SetParameterValues
	RPC is initiated but the response to
	the SetParameterValues RPC has not been received.

Table 13: Table 7.10-2: RPC ChangeDUState:InstallOpStruct Arguments

RPC ChangeDUState:InstallOpStruct Argument

URL: URL of the Server that M2M Node uses to download the DU.

Username: Username credential of Server that the CPE uses to download the DU - Supplied by the CSE.

Password: Password credential of Server that the CPE uses to download the DU - Supplied by the CSE.

UUID: Supplied by the CSE and used to correlate the DU for the uninstall operation.

ExecurtionEnvRef: <empty> not used

Table 14: Table 7.10-3: RPC ChangeDUState:UninstallOpStruct Arguments

RPC ChangeDUState:Uninstall OpStruct Argument		
UUID: UUID of the DU that was installed - Maintained by the CSE.		
ExecutionEnvRef: <empty> not used</empty>		

7.11 Resource [reboot]

The Resource [reboot] maps to either the Reboot RPC or FactoryReset RPC of TR-069 [4].

When the reboot attribute of the Resource [reboot] is set to "True", the CSE shall execute the Reboot RPC of TR069 [4].

When the factoryReset attribute of Resource [reboot] is set to "True", the CSE shall execute the FactoryReset RPC of TR-069 [4].

Table 15: Table 7.11-1: Resource [reboot]

Attribute Name of [reboot]	Description
reboot factoryReset	Executes the Reboot RPC FactoryReset RPC

Table 16: Table 7.11-2: RPC Reboot Arguments

RPC Reboot Arguments

CommandKey: Automatically set by the CSE where the reboot is set to "True" in order to correlate the "M-Reboot" Event from the next Inform.

7.12 Resource [cmdhPolicy]

7.12.0 Introduction

The Resource [cmdhPolicy] represents a set of rules defining which CMDH parameters will be used by default when a request issued by a local originator contains the **ec** (event category) parameter but not all other CMDH parameters, see clause D.12 of TS-0001 [1].

The Resource [cmdhPolicy] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_oneM2M_org_CSE. $\{i\}$. CMDH. Policy. $\{i\}$ object.

The Policy instance shall be created using the Add Object RPC of TR-069 [4].

The Policy instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a Policy instance shall be retrieved using the GetParameter-Values RPC of TR-069 [4].

The information of a Policy instance shall be updated using the SetParameter-Values RPC of TR-069 [4].

Table 17: Table 7.12-1: Resource [cmdhPolicy]

Attribute Name of [cmdhPolicy]	X_oneM2M_org Parameter
name	Device.X_oneM2M_org_CSE.{i}.CMDH.Policy.{i}.Name
$\operatorname{cmdhDefaults}$	$\label{lem:cond} Device. X_one M2 M_org_CSE. \{i\}. CMDH. Policy. \{i\}. Default Rule$
$\operatorname{cmdhLimits}$	$\label{lem:conematic} Device. X_one M2 M_org_CSE. \{i\}. CMDH. Policy. \{i\}. LimitRules$
${\rm cmdhNetworkAccessRules}$	Device.X_oneM2M_org_CSE.{i}.CMDH.Policy.{i}.NetworkAccessEC
cmdhBuffer	$\label{lem:conematic} Device. X_one M2 M_org_CSE. \{i\}. CMDH. Policy. \{i\}. Buffer Rules$

$7.12.1 \ Resource \ [activeCmdhPolicy]$

The Resource [activeCmdhPolicy] provides a link to the currently active set of CMDH policies, see clause D.12.1 of TS-0001 [1].

The Resource [activeCmdhPolicy] is mapped to the Enable parameter of the Device.X_oneM2M_org_CSE.{i}.CMDH.Policy.{i} object.

The information of a Policy instance shall be updated using the SetParameter-Values RPC of TR-069 [4].

Table 18: Table 7.12.1-1: Resource [activeCmdhPolicy]

Attribute Name of [activeCmdhPolicy]	X_oneM2M_org Parameter
cmdhPolicy	Device.X_oneM2M_org_CSE.{i}.CMDH.Policy.{i}.Enable At most one Policy instance shall be enabled at a time. As such the Policy instance that has the Enable parameter with a value of "True" is the active CMDH policy.

7.12.2 Resource [cmdhDefaults]

The Resource [cmdhDefaults] defines default CMDH policy values, see clause D.12.2 of TS-0001 [1].

The Resource [cmdhDefaults] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_CSE.{i}.CMDH.Default.{i} object.

The Default instance shall be created using the Add Object RPC of TR-069 [4].

The Default instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a Default instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a Default instance shall be updated using the SetParameter-Values RPC of TR-069 [4].

Table 19: Table 7.12.2-1: Resource [cmdhDefaults]

Attribute Name of [cmdhDefaults]	X_oneM2M_org Parameter
cmdhDefEcValue	Device.X_oneM2M_org_CSE.{i}.CMDH.Default.{i}.DefaultECRules
cmdhEcDefParamValues	Device.X_oneM2M_org_CSE.{i}.CMDH.Default.{i}.DefaultECParase

7.12.3 Resource [cmdhDefEcValue]

The Resource [cmdhDefEcValue] represents a value for the **ec** (event category) parameter of an incoming request, see clause D.12.3 of TS-0001 [1].

The Resource [cmdhDefEcValue] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_oneM2M_org_CSE. $\{i\}$. CMDH. DefaultECRule. $\{i\}$ object.

The DefaultECRule instance shall be created using the Add Object RPC of TR-069 [4].

The DefaultECRule instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a DefaultECRule instance shall be retrieved using the Get-ParameterValues RPC of TR-069 [4].

The information of a DefaultECRule instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 20: Table 7.12.3-1: Resource [cmdhDefEcValue]

Attribute Name of [cmdhDefEcValue]	X_oneM2M_org Parameter
order	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECRule.{i}.Order
defEcValue	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECRule.{i}.EventCa
requestOrigin	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Default ECRule. \{i\}. Requestions for the property of $
requestContext	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Default ECRule. \{i\}. Requestions for the property of $
${\bf request Context Notification}$	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Default ECRule. \{i\}. Requestions for the property of $
requestCharacteristics	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Default ECRule. \{i\}. Requestions for the property of $

7.12.4 Resource [cmdhEcDefParamValues]

The Resource [cmdhEcDefParamValues] represents a specific set of default values for the CMDH related parameters **rqet** (request expiration timestamp), **rset** (result expiration timestamp), **oet** (operational execution time), **rp** (response persistence) and **da** (delivery aggregation) that are applicable for a given **ec** (event category) if these parameters are not specified in the request, see clause D.12.4 of TS-0001 [1].

The Resource [cmdhEcDefParamValues] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECParamRule.{i} object.

The DefaultECParamRule instance shall be created using the Add Object RPC of TR-069 [4].

The DefaultECParamRule instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a DefaultECParamRule instance shall be retrieved using the GetParameterValues RPC of TR069 [4].

The information of a DefaultECParamRule instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 21: Table 7.12.4-1: Resource [cmdhEcDefParamValues]

Attribute Name of [cmdhEcDefParamValues]	X_oneM2M_org Parameter
1 11 7	
applicableEventCategory	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Default ECP aramRule. \{i\}. Example a substitution of the property of $
defaultRequestExpTime	$Device. X_one M2M_org_CSE. \{i\}. CMDH. Default ECParamRule. \{i\}. Resulting the property of th$
defaultResultExpTime	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECParamRule.{i}.R
defaultOpExecTime	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECParamRule.{i}.O
defaultRespPersistence	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECParamRule.{i}.R
defaultDelAggregation	Device.X_oneM2M_org_CSE.{i}.CMDH.DefaultECParamRule.{i}.D

7.12.5 Resource [cmdhLimits]

The Resource [cmdhLimits] represents limits for CMDH related parameter values, see clause D.12.5 of TS-0001 [1].

The Resource [cmdhLimits] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_one M2M_org_CSE. $\{i\}$. CMDH. Limit. $\{i\}$ object.

The Limit instance shall be created using the Add Object RPC of TR-069 [4].

The Limit instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a Limit instance shall be retrieved using the GetParameter-Values RPC of TR-069 [4].

The information of a Limit instance shall be updated using the SetParameter-Values RPC of TR-069 [4].

Table 22: Table 7.12.5-1: Resource [cmdhLimits]

Attribute Name of [cmdhLimits]	X_oneM2M_org Parameter
order	$\overline{\text{Device.X_oneM2M_org_CSE.\{i\}.CMDH.Limit.\{i\}.Order}}$
requestOrigin	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.RequestOrigin
requestContext	$Device. X_one M2 M_org_CSE. \{i\}. CMDH. Limit. \{i\}. Request Context$
request Context Notification	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.RequestContextNo
requestCharacteristics	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.RequestCharacter
limitsEventCategory	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.EventCategories
limitsRequestExpTime	$\label{lem:cond} Device. X_one M2 M_org_CSE. \{i\}. CMDH. Limit. \{i\}. Request ExpTime$
limitsResultExpTime	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.ResultExpTime
limitsOpExecTime	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.OperationExecTin
limitsRespPersistence	Device.X_oneM2M_org_CSE.{i}.CMDH.Limit.{i}.ResponsePersisten
limitsDelAggregation	$\label{eq:decomposition} Device. X_one M2 M_org_CSE. \\ \{i\}. CMDH. Limit. \\ \{i\}. Delivery Aggregation for the context of the $

7.12.6 Resource [cmdhNetworkAccessRules]

The Resource [cmdhNetworkAccessRules] defines the usage of underlying networks for forwarding information to other CSEs during processing of CMDH-related requests in a CSE, see clause D.12.6 of TS-0001 [1].

The Resource [cmdhNetworkAccessRules] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRule.{i} object.

The NetworkAccessECRule instance shall be created using the Add Object RPC of TR-069 [4].

The NetworkAccessECRule instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a NetworkAccessECRule instance shall be retrieved using the GetParameterValues RPC of TR069 [4].

The information of a NetworkAccessECRule instance shall be updated using the SetParameterValues RPC of TR069 [4].

Table 23: Table 7.12.6-1: Resource [cmdhNetworkAccessRules]

Attribute Name of	
[cmdhNetworkAccessRules]	X_oneM2M_org Parameter
applicableEventCategories cmdhNwAccessRule	Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRule.{i}.Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRule.{i}.Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRule.{i}.Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRule.{i}.Device.X_oneM2M_org_CSE.{i

7.12.7 Resource [cmdhNwAccessRule]

The Resource [cmdhNwAccessRule] define limits in usage of specific underlying networks for forwarding information to other CSEs during processing of CMDH-related requests, see clause D.12.7 of TS-0001 [1].

The Resource [cmdhNwAccessRule] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessECRu object.

The NetworkAccessRule instance shall be created using the Add Object RPC of TR-069 [4].

The NetworkAccessRule instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a NetworkAccessRule instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a NetworkAccessRule instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 24: Table 7.12.7-1: Resource [cmdhNwAccessRule]

Attribute Name of [cmdhNwAccessRule]	X_oneM2M_org Parameter
targetNetwork minReqVolume	Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Targ Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Min
backOffParameters	Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Bacl Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Bacl Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Max
otherConditions allowedSchedule	Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Max Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Other Device.X_oneM2M_org_CSE.{i}.CMDH.NetworkAccessRule.{i}.Allo

7.12.8 Resource [cmdhBuffer]

The Resource [cmdhBuffer] represents limits in usage of buffers for temporarily storing information that needs to be forwarded to other CSEs during processing of CMDH-related requests in a CSE, see clause D.12.8 of TS-0001 [1].

The Resource [cmdhBuffer] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_CSE. $\{i\}$.CMDH.Buffer. $\{i\}$ object.

The Buffer instance shall be created using the Add Object RPC of TR-069 [4].

The Buffer instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a Buffer instance shall be retrieved using the GetParameter-Values RPC of TR-069 [4].

The information of a Buffer instance shall be updated using the SetParameter-Values RPC of TR-069 [4].

Table 25: Table 7.12.8-1: Resource [cmdhBuffer]

Attribute Name of [cmdhBuffer]	X_oneM2M_org Parameter
applicableEventCategory maxBufferSize storagePriority	$\label{lem:condition} Device. X_one M2M_org_CSE. \{i\}. CMDH. Buffer. \{i\}. Event Categories \\ Device. X_one M2M_org_CSE. \{i\}. CMDH. Buffer. \{i\}. Maximum Buffer States Device. X_one M2M_org_CSE. \{i\}. CMDH. Buffer. \{i\}. Storage Priority Storage P$

7.13 Resource Type <mgmtCmd>

Each mgmtCmd Resource shall map to BBF TR-069 RPC commands based on the value of cmdType. Accordingly, execReqArgs shall contain arguments related to the corresponding BBF TR-069 RPCs. The details about corresponding procedure mapping are described in clause 8.2.

Table 26: Table 7.13-1: Resource Type <mgmtCmd>

Attribute cmdType of mgmtCmd	Attribute execReqArgs of mgmtCmd
cmdType = RESET	Shall include all arguments related to
	BBF FactoryReset RPC
cmdType = REBOOT	Shall include all arguments related to
	BBF Reboot RPC
cmdType = UPLOAD	Shall include all arguments related to
	BBF Reboot RPC
cmdType = DOWNLOAD	Shall contain all arguments related to
	BBF Reboot RPC
cmdType = SOFTWAREINSTALL	Shall contain all arguments related to
	BBF ChangeDUState RPC which
	shall contain "InstallOpStruct"
	structure.
cmdType =	Shall contain all arguments related to
SOFTWAREUNINSTALL	BBF ChangeDUState RPC which
	shall contain "UninstallOpStruct"
	structure.

7.14 Resource Type <execInstance>

The <execInstance> resource from TS-0004 [2] shall map to BBF CancelTransfer RPC commands when it is disabled/cancelled using a Update operation or deleted using a Delete operation. The details are described in clause 8.2.

7.15 Resource [registration]

The Resource [registration] represents the configuration information needed to register and AE or CSE with a Registrar CSE.

The Resource [registration] is a multi-instance object where the key of the object is the originatorID (i.e. AE-ID, CSE-ID). The following rules are used to determine the object instance based on the originatorID:

- When the originator ID resource is for a CSE-ID, the TR-069 object instance Device.X_oneM2M_org_CSE.{i} shall be used for the specified CSE-ID.
- When the originatorID resource is for an AE-ID, the TR-069 object instance Device.X_oneM2M_org_AE.{i} shall be used for the specified AE-ID.

The information shall be created using the Add Object RPC of TR-069 [4].

The information shall be deleted using the Delete Object RPC of TR-069 [4].

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The capabilities shall be enabled and disabled using the SetParameterValues RPC of TR-069 [4].

Table 27: Table 7.15-1: Resource [registration] for CSE

	BBF TR-181 [6] Parameter
Attribute Name of [registration]	$(X_oneM2M_org_CSE)$
originatorID	ID - See description of the type of
	object to instantiate.
роА	PointOfAccess
CSEBase	CSEBase - Resource-ID of the
	CSEBase of Registrar CSE.
CSE-ID	CSEID - CSE-ID of the Registrar
	CSE.
externalID	ExternalID
triggerRecipientID	TriggerRecipientID
mgmtLink [authenticationProfile]	AuthenticationProfile (TR-069
,	reference parameter that references a
	row in the De-
	vice.X_oneM2M_org_SecuritySolution
	table)
	•

Table 28: Table 7.15-2: Resource [registration] for AE $\,$

Attribute Name of [registration]	BBF TR-181 [6] Parameter (X_oneM2M_org_AE)
originatorID	ID - See description of the type of object to instantiate.
poA	PointOfAccess
CSEBase	CSEBase - Resource-ID of the
	CSEBase of Registrar CSE.
CSE-ID	CSEID - CSE-ID of the Registrar
	CSE.
appID	ApplicationID
mgmtLink [authenticationProfile]	AuthenticationProfile (TR-069
	reference parameter that references a
	row in the De-
	$\label{lem:conematic} vice. X_oneM2M_org_SecuritySolution. Authentication Protable)$

7.16 Resource [dataCollection]

The Resource [dataCollection] represents data collection (measurement) and transmittal (reporting) properties for an AE.

The information shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The capabilities shall be enabled and disabled using the SetParameterValues RPC of TR-069 [4].

Table 29: Table 7.16-1: Resource [dataCollection]

Attribute Name of [dataCollection]	BBF TR-181 [6] Parameter
containerPath reportingSchedule measurementSchedule	ContainerPath ReportingSchedule CollectionSchedule

7.17 Security Solutions

7.17.1 Introduction

This clauses in the section of the present document contains information on how to map the security specific management resources from TS-0022 [8] to managed objects and parameters as defined in the TR-181 [6] data model or the Remote Procedure Calls (RPCs) in TR-069 [4].

7.17.2 Resource [authenticationProfile]

The Resource [authenticationProfile] represents configuration information regarding establishing mutually-authenticated secure communications. The security principal using this configuration information can be a CSE or AE or the Managed ADN/ASN/MN acting as security principal on behalf of AEs on the Node, see clause 7.1.4 of TS0022 [8].

The Resource [authenticationProfile] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_SecuritySolution.AuthenticationProfileObject.

The AuthenticationRule instance shall be created using the Add Object RPC of TR-069 [4].

The AuthenticationRule instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a AuthenticationProfile instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a AuthenticationProfile instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 30: Table 7.17.2-1: Resource [authenticationProfile]

Attribute Name of	Parameters of
[authentication Profile]	$Device. X_one M2 M_org_Security Solution. Authentication Profile. \{i\}$
SUID	SUID
TLSCiphersuites	TLSCiphersuites
symmKeyID	SymmetricKeyID
symmKeyValue	SymmetricKeyValue
MAFKeyRegLabels	MAFKeyRegLabels
MAFKeyRegDuration	MAFKeyRegDuration
mycertFingerprint	MyCert (reference)
rawPubKeyID	RawPubKeyID
mgmtLink [trustAnchorCred]	TrustAnchorCredentials (list of
	references)

The parameter MyCert is a TR-069 reference parameter that references a row in the Device. Security. Certificate table where the value of the mycertFingerprint attribute matches the value of a Device. Security. Certificate. {i}. X_oneM2M_org_Fingerprint parameter. The X_oneM2M_org_Fingerprint parameter shall be a unique key for the Device. Security. Certificate table.

The parameter TrustAnchorCredentials is a list of TR-069 reference parameter where each entry in the list references a row in the Device.X_oneM2M_org_SecuritySolution.TrustAnchorCredential table.

7.17.3 Resource [trustAnchorCred]

The Resource [trustAnchorCred] represents configuration information regarding certificates provided by certificate authorities used be managed entities to authenticate peer endpoints, see clause 7.1.6 of TS-0022 [8].

The Resource [trustAnchorCred] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device. X_one M2M_org_Security Solution. Trust Anchor Credential. $\{i\}$ object.

The TrustAnchorCredential instance shall be created using the Add Object RPC of TR-069 [4].

The TrustAnchorCredential instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a TrustAnchorCredential instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a TrustAnchorCredential instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 31: Table 7.17.3-1: Resource [trustAnchorCred]

Attribute Name of [trustAnchorCred]	Parameters of Device.X_oneM2M_org_SecuritySolution.TrustAnchorCredential.{i}
certFingerprint URI	Fingerprint RemoteTrustStore

7.17.4 Resource [myCertFileCred]

The Resource [myCertFileCred] represents configuration information regarding certificates presented by the managed entity to remote entities for the establishment of secure communications, see clause 7.1.5 of TS-0022 [8].

The Resource [myCertFileCred] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.Security.Certificate.{i} object.

The Certificate instance shall be created either using the Download RPC of TR-069 [4] or via an out-of-band mechanism.

The Certificate instance shall be deleted using the Download RPC of TR-069 [4] or via an out-of-band mechanism.

The information of a Certificate instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a Certificate instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 32: Table 7.17.4-1: Resource [myCertFileCred]

Attribute Name of [myCertFileCred]	Parameters of Device.Security.Credential.{i}
SUIDs myCertFileFormat myCertFileContent	X_oneM2M_org_SUIDs X_oneM2M_org_Format The certificate is downloaded as part of the Download RPC of TR-069

The parameter Authentication Profile is a TR-069 reference parameter that references a row in the Device. X_oneM2M_org_SecuritySolution. Authentication Profile table where the value of the mycertFingerprint attribute matches the value of a Device. Security. Certficate. {i}.X_oneM2M_org_Fingerprint parameter. The X_oneM2M_org_Fingerprint parameter shall be a unique key for the Device. Security. Certificate table.

7.17.5 Resource [MAFClientRegCfg]

The Resource [MAFClientRegCfg] represents configuration information that permits a MAF client to register with a MAF, see clause 7.1.7 of TS-0022 [8].

The Resource [MAFClientRegCfg] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_SecuritySolution.MAFClientRegistrat object.

The MAFClientRegistration instance shall be created using the Add Object RPC of TR-069 [4].

The MAFClientRegistration instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a MAFClientRegistration instance shall be retrieved using the GetParameterValues RPC of TR-069 [4].

The information of a MAFClientRegistration instance shall be updated using the SetParameterValues RPC of TR-069 [4].

Table 33: Table 7.17.5-1: Resource [MAFClientRegCfg]

Attribute Name of [MAFClientRegCfg]	Parameters of Device.X_oneM2M_org_SecuritySolution.MAFClientRegistration. {i}
mgmtLink [authenticationProfile\	AuthenticationProfile (TR-069 reference parameter that references a row in the Device.X_oneM2M_org_SecuritySolution.AuthenticationProfile table)
fqdn	FQDN
adminFQDN	AdminFQDN
httpPort	HTTPPort
coapPort	CoAPPort
websocketPort	WebsocketPort
expirationTime	ExpirationTimeStamp

Editor note: Correct mgmtLink row above(-> [authenticationProfile])

7.17.6 Resource [MEFClientRegCfg]

The Resource [MEFClientRegCfg] represents configuration information that permits a MEF client to register with a MEF, see clause 7.1.8 of TS-0022 [8].

The Resource [MEFClientRegCfg] is a multi-instance Resource where each instance of the Resource shall map to an instance of Device.X_oneM2M_org_SecuritySolution.MEFClientRegistrat object.

The MEFClientRegistration instance shall be created using the Add Object RPC of TR-069 [4].

The MEFClientRegistration instance shall be deleted using the Delete Object RPC of TR-069 [4].

The information of a MEFClientRegistration instance shall be retrieved using the GetParameterValues RPC of TR069 [4].

The information of a MEFClientRegistration instance shall be updated using the SetParameterValues RPC of TR069 [4].

Table 34: Table 7.17.6-1: Resource [MEFClientRegCfg]

Attribute Name of [MEFClientRegCfg]	Parameters of Device.X_oneM2M_org_SecuritySolution.MEFClientRegistration. {i}
${\it mgmtLink~[authentication Profile \backslash}$	AuthenticationProfile (TR-069 reference parameter that references a row in the Device.X_oneM2M_org_SecuritySolution.AuthenticationProfile table)
fqdn	FQDN
$\operatorname{adminFQDN}$	$\operatorname{AdminFQDN}$
httpPort	HTTPPort
coapPort	CoAPPort
websocketPort	WebsocketPort
expirationTime	ExpirationTimeStamp

Editor note: Correct mgmtLink row above(-> [authenticationProfile])

8 Mapping of procedures for management

8.0 Introduction

This clause contains all information on how to map management resource primitives from TS-0004 [2] to the Remote Procedure Calls (RPCs) in TR-069 [4].

8.1 Resource Type <mgmtObj> primitive mappings

8.1.0 Introduction

This clause contains all information on how to map Resource Type <mgmtObj>primitives from TS-0004 [2] to the Remote Procedure Calls (RPCs) in TR-069 [4].

8.1.1 Alias-Based Addressing Mechanism

In order to utilize the Alias-Based Addressing Mechanism, the mechanism has to be supported by the ACS and CPE in order to map the M2M Service Layer identifier for the Resource instance to the CPE object instance. If the AliasBased Addressing Mechanism feature is not supported by either the ACS or CPE, the CSE has to retain the mapping of the these M2M Resource instance identifiers.

8.1.2 Create primitive mapping

8.1.2.0 Introduction The Create Request and Response primitives shall map to the AddObject RPC. The AddObject RPC is defined in TR-069 [4] as a synchronous RPC and returns a successful response or one of the following fault codes in Table 8.1.2.0-1.

Table 35: Table 8.1.2.0-1: AddObject Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9003	Invalid arguments	4000
		(BAD_REQUEST)
9004	Resources exceeded	4000
	(when used in	$(BAD_REQUEST)$
	association with	
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	
9005	Invalid Parameter name	5001
	(associated with	(NOT_IMPLEMENTED)
	Set/GetParameterValues,	
	GetParameterNames,	
	$\operatorname{Set}/\operatorname{GetParameterAttributes},$	
	AddObject, and	
	DeleteObject)	

8.1.2.1 M2M Service Layer Resource Instance Identifier mapping When the Resource is a multi-instance Resource, the AddObject RPC should utilize the Alias-Based Addressing Mechanism as defined in Section 3.6.1 of TR-069 [4] in order to use the Resource instance value of the URI.

8.1.3 Delete primitive mapping

8.1.3.1 Delete primitive mapping for deletion of Object Instances The Delete Request and Response primitives that results in the deletion of a Resource shall map to the DeleteObject RPC. The DeleteObject RPC is defined in TR-069 [4] as a synchronous RPC and returns a successful response or one of the following fault codes in Table 8.1.3.1-1.

Table 36: Table 8.1.3.1-1: DeleteObject Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9003	Invalid arguments	4000
	-	(BAD_REQUEST)
9005	Invalid Parameter name	5001
	(associated with	(NOT_IMPLEMENTED
	Set/GetParameterValues,	•
	GetParameterNames,	
	Set/GetParameterAttributes,	
	AddObject, and	
	DeleteObject)	

8.1.3.2 Delete primitive mapping for software un-install operation

The Delete Request and Response primitives that results in a software un-install operation (e.g. Resource [software]) shall use the ChangeDUState mechanism defined in TR-069 [4]. The ChangeDUState mechanism is an asynchronous command that consists of the synchronous ChangeDUState RPC for the uninstallation request and the asynchronous ChangeDUStateComplete RPC. The ChangeDUState RPC returns a successful response or one of the following fault codes in Table 8.1.3.2-1. A successful response means that the CPE has accepted the ChangeDUState RPC.

Table 37: Table 8.1.3.2-1: ChangeDUState Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000
		(BAD_REQUEST)
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD REQUEST)

Fault code	Description	Response Status Code
9004	Resources exceeded (when used in association with SetParameterValues, this cannot be used to indicate Parameters in error)	4000 (BAD_REQUEST)

Once the CPE has attempted to change the state of the deployment unit, the CPE reports the result of the state change operation using the ChangeDUS-tateComplete RPC. The ChangeDUStateComplete RPC indicates a successful operation or one of the following fault codes in Table 8.1.3.2-2.

Table 38: Table 8.1.3.2-2: Change DUState Complete Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no reason specified)	4000 (BAD_REQUEST)
9003	Invalid arguments	4000 (BAD_REQUEST)
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	4000 (BAD_REQUEST)
9013	Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9016	methods). File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9017	methods). File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9018	File transfer failure: file corrupted or otherwise unusable (associated with Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete	4000 (BAD_REQUEST)
9022	methods). Invalid UUID Format (associated with DUStateChangeComplete or AutonomousDUStateChangeComplete methods: Install,	4000 (BAD_REQUEST)
9023	Update, and Uninstall) Unknown Execution Environment (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9024	methods: Install only) Disabled Execution Environment (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install, Undate and Uninetall)	4000 (BAD_REQUEST)
9025	Update, and Uninstall) Deployment Unit to Execution Environment Mismatch (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install and Update)	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9026	Duplicate Deployment Unit (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9027	methods: Install only) System Resources Exceeded (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install and Update)	4000 (BAD_REQUEST)
9028	Unknown Deployment Unit (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Update and Uninstall)	4000 (BAD_REQUEST)
9029	Invalid Deployment Unit State (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Install,	4000 (BAD_REQUEST)
9030	Update and Uninstall) Invalid Deployment Unit Update - Downgrade not permitted (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Update only)	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9031	Invalid Deployment Unit Update - Version not specified (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Update only)	4000 (BAD_REQUEST)
9032	Invalid Deployment Unit Update - Version already exists (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Update only)	4000 (BAD_REQUEST)

8.1.4 Update primitive mapping

8.1.4.1 Update primitive mapping for Parameter modifications The Update Request and Response primitives that modifies the value of Resource attributes shall map to the SetParameterValues RPC. The SetParametersValue RPC is defined in TR-069 [4] as a synchronous RPC and returns a successful response or one of the following fault codes in Table 8.1.4.1-1.

Table 39: Table 8.1.4.1-1: SetParameterValues Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9003	Invalid arguments	4000
		(BAD_REQUEST)
9004	Resources exceeded	4000
	(when used in	(BAD_REQUEST)
	association with	
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	

Fault code	Description	Response Status Code
9005	Invalid Parameter name	5001
	(associated with	(NOT_IMPLEMENTED)
	Set/GetParameterValues,	
	GetParameterNames,	
	Set/GetParameterAttribu	tes,
	AddObject, and	
	DeleteObject)	
9006	Invalid Parameter type	4000
	(associated with	(BAD_REQUEST)
	SetParameterValues)	
9007	Invalid Parameter value	4000
	(associated with	(BAD REQUEST)
	SetParameterValues)	, _ ,
9008	Attempt to set a	4000
	non-writable Parameter	(BAD REQUEST)
	(associated with	· _ ,
	SetParameterValues)	

8.1.4.2 Update primitive mapping for upload file transfer operations

The Update Request and Response primitives that results in an upload file transfer operation (e.g. logStop attribute of the Resource [eventLog]) shall use the Upload mechanism defined in TR-069 [4]. The Upload mechanism is an asynchronous command that consists of the synchronous Upload RPC for the Upload and the asynchronous TransferComplete RPC. The Upload RPC returns a successful response or one of the following fault codes in Table 8.1.4.2-1. A successful response means that the CPE has accepted the Upload RPC.

Table 40: Table 8.1.4.2-1: Upload Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000 (BAD_REQUEST)
9001	Request denied (no	4000
9002	reason specified) Internal error	(BAD_REQUEST) 4000
9003	Invalid arguments	$(BAD_REQUEST)$ 4000
3000	invand arguments	(BAD REQUEST)

Fault code	Description	Response Status Code
9004	Resources exceeded (when used in association with SetParameterValues, this cannot be used to indicate Parameters in error)	4000 (BAD_REQUEST)
9011	Upload failure (associated with Upload, TransferComplete or AutonomousTransfer- Complete methods).	4000 (BAD_REQUEST)
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9013	methods). Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Once the CPE has attempted to upload the file, the CPE reports the result of the Upload operation using the TransferComplete RPC. The TransferComplete RPC indicates a successful operation or one of the following fault codes in Table 8.1.4.2-2.

Table 41: Table 8.1.4.2-2: TransferComplete Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9010	File transfer failure	4000
	(associated with	(BAD_REQUEST)
	Download,	
	ScheduleDownload,	
	TransferComplete or	
	Autonomous Transfer-	
	Complete methods).	
9011	Upload failure	4000
	(associated with Upload,	(BAD_REQUEST)
	TransferComplete or	,
	Autonomous Transfer-	
	Complete methods).	
9012	File transfer server	4000
	authentication failure	(BAD_REQUEST)
	(associated with Upload,	
	Download,	
	TransferComplete,	
	Autonomous Transfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
	methods).	
9014	File transfer failure:	4000
	unable to join multicast	(BAD_REQUEST)
	group (associated with	, _ ,
	Download,	
	TransferComplete or	
	Autonomous Transfer-	
	Complete methods).	

Fault code	Description	Response Status Code
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9016	methods). File transfer failure:	4000
	unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	(BAD_REQUEST)
9017	File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9018	File transfer failure: file	4000
	corrupted or otherwise	$(BAD_REQUEST)$
	unusable (associated	
	with Download,	
	TransferComplete,	
	AutonomousTransfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
	methods).	
9019	File transfer failure: file	4000
	authentication failure	$(BAD_REQUEST)$
	(associated with	
	Download,	
	TransferComplete or	
	AutonomousTransfer-	
	Complete methods).	
9020	File transfer failure:	4000
	unable to complete	$(BAD_REQUEST)$
	download within	
	specified time windows	
	(associated with	
	${\bf Transfer Complete}$	
	method).	

8.1.4.3 Update primitive mapping for download file transfer operations

The Update Request and Response primitives that results in a download file transfer operation (e.g. update attribute of Resource [firmware]) shall use the Download mechanism defined in TR-069 [4]. The Download mechanism is an asynchronous command that consists of the synchronous Download RPC for the Download and the asynchronous TransferComplete RPC. The Download RPC returns a successful response or one of the following fault codes in Table 8.1.4.3-1. A successful response means that the CPE has accepted the Download RPC.

Table 42: Table 8.1.4.3-1: Download Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000 (BAD_REQUEST)
9001	Request denied (no reason specified)	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9002	Internal error	4000
0000	T 111	(BAD_REQUEST)
9003	Invalid arguments	4000
9004	Resources exceeded	(BAD_REQUEST) 4000
9004	(when used in	(BAD_REQUEST)
	association with	(DAD_ICEQUEST)
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	
9010	File transfer failure	4000
	(associated with	(BAD_REQUEST)
	Download,	
	ScheduleDownload,	
	TransferComplete or	
	Autonomous Transfer-	
	Complete methods).	
9012	File transfer server	4000 (DAD DECHECE)
	authentication failure	(BAD_REQUEST)
	(associated with Upload,	
	Download, TransferComplete,	
	AutonomousTransfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
	methods).	
9013	Unsupported protocol	4000
	for file transfer	$(BAD_REQUEST)$
	(associated with Upload,	
	Download,	
	ScheduleDownload,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete methods).	
	methods).	

Once the CPE has attempted to download the file, the CPE reports the result of the download operation using the TransferComplete RPC. The TransferComplete

RPC indicates a successful operation or one of the following fault codes in Table 8.1.4.3-2.

Table 43: Table 8.1.4.3-2: TransferComplete Fault Code Mapping

EST)
,
EST)
,
EST)
,
EST)
,
EST)
, ,
EST)
,
]

Fault code	Description	Response Status Code
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9016	methods). File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9017	methods). File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9018	File transfer failure: file	4000
	corrupted or otherwise	$(BAD_REQUEST)$
	unusable (associated	
	with Download,	
	TransferComplete,	
	AutonomousTransfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
0040	methods).	4000
9019	File transfer failure: file	4000
	authentication failure	(BAD_REQUEST)
	(associated with	
	Download,	
	TransferComplete or	
	Autonomous Transfer-	
0000	Complete methods).	4000
9020	File transfer failure:	4000 (DAD DECHECE)
	unable to complete	(BAD_REQUEST)
	download within	
	specified time windows	
	(associated with	
	TransferComplete	
	method).	

8.1.4.4 Update primitive mapping for reboot operation The Update Request and Response primitives that results in a reboot operation (e.g. reboot attribute of Resource [reboot]) shall use the Reboot RPC defined in TR-069 [4]. The Reboot RPC is asynchronous command. The Reboot RPC returns a successful response or one of the following fault codes in Table 8.1.4.4-1.

Table 44: Table 8.1.4.4-1: Reboot Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no reason specified)	4000 (BAD_REQUEST)
9002	Internal error	4000
9003	Invalid arguments	(BAD_REQUEST) 4000 (BAD_REQUEST)

8.1.4.5 Update primitive mapping for factory reset operation The Update Request and Response primitives that results in a factory reset operation (e.g. factoryReset attribute of Resource [reboot]) shall use the FactoryReset RPC defined in TR-069 [4]. The FactoryReset RPC is an asynchronous command. The FactoryReset RPC returns a successful response or one of the following fault codes in Table 8.1.4.5-1.

Table 45: Table 8.1.4.5-1: FactoryReset Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000 (BAD_REQUEST)
9001	Request denied (no reason specified)	4000 (BAD_REQUEST)
9002	Internal error	4000 (BAD REQUEST)
9003	Invalid arguments	4000 (BAD_REQUEST)

8.1.4.6 Update primitive mapping for software install operation The Update Request and Response primitives that results in a software installation operation (e.g. install attribute of Resource [software]) shall use the Change-DUState mechanism defined in TR-069 [4]. The Change-DUState mechanism is an asynchronous command that consists of the synchronous Change-DUState RPC for the download and the asynchronous Change-DUState-Complete RPC. The Change-DUState RPC returns a successful response or one of the following fault codes in Table 8.1.4.6-1. A successful response means that the CPE has accepted the Change-DUState RPC.

Table 46: Table 8.1.4.6-1: ChangeDUState Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000 (BAD_REQUEST)
9001	Request denied (no reason specified)	4000 (BAD_REQUEST)
9002	Internal error	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9004	Resources exceeded (when used in association with SetParameterValues, this cannot be used to indicate Parameters in error)	4000 (BAD_REQUEST)

Once the CPE has attempted to change the state of the deployment unit, the CPE reports the result of the state change operation using the ChangeDUS-tateComplete RPC. The ChangeDUStateComplete RPC indicates a successful operation or one of the following fault codes in Table 8.1.4.6-2.

Table 47: Table 8.1.4.6-2: ChangeDUStateComplete Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9003	Invalid arguments	4000
		(BAD_REQUEST)
9012	File transfer server	4000
	authentication failure	(BAD_REQUEST)
	(associated with Upload,	
	Download,	
	TransferComplete,	
	Autonomous Transfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
	methods).	
9013	Unsupported protocol	4000
	for file transfer	(BAD_REQUEST)
	(associated with Upload,	
	Download,	
	ScheduleDownload,	
	DUStateChangeCom-	
	plete, or	
	Autonomous DUState-	
	ChangeComplete	
	methods).	

Fault code	Description	Response Status Code
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9016	methods). File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9017	methods). File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9018	File transfer failure: file corrupted or otherwise unusable (associated with Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete	4000 (BAD_REQUEST)
9022	methods). Invalid UUID Format (associated with DUStateChangeComplete or AutonomousDUStateChangeComplete methods: Install,	4000 (BAD_REQUEST)
9023	Update, and Uninstall) Unknown Execution Environment (associated with DUStateChange-Complete or AutonomousDUState-ChangeComplete	4000 (BAD_REQUEST)
9024	methods: Install only) Disabled Execution Environment (associated with DUStateChange-Complete or AutonomousDUState-ChangeComplete methods: Install, Update, and Uninstall)	4000 (BAD_REQUEST)
9025	Deployment Unit to Execution Environment Mismatch (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install and Update)	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9026	Duplicate Deployment Unit (associated with DUStateChangeCom- plete or AutonomousDUState-	4000 (BAD_REQUEST)
9027	ChangeComplete methods: Install only) System Resources Exceeded (associated with DUStateChange- Complete or AutonomousDUState-	4000 (BAD_REQUEST)
9028	ChangeComplete methods: Install and Update) Unknown Deployment Unit (associated with DUStateChangeComplete or	4000 (BAD_REQUEST)
9029	Autonomous DUS tate-Change Complete methods: Update and Uninstall) Invalid Deployment Unit State (associated with DUS tate Change Complete or	4000 (BAD_REQUEST)
9030	Autonomous DUS tate-Change Complete methods: Install, Update and Uninstall) Invalid Deployment Unit Update - Downgrade not permitted (associated with DUS tate Change-Complete or Autonomous DUS tate-	4000 (BAD_REQUEST)
	ChangeComplete methods: Update only)	

Fault code	Description	Response Status Code
9031	Invalid Deployment Unit	4000
	Update - Version not	(BAD_REQUEST)
	specified (associated	
	with DUStateChange-	
	Complete or	
	Autonomous DUState-	
	${\bf Change Complete}$	
	methods: Update only)	
9032	Invalid Deployment Unit	4000
	Update - Version already	(BAD_REQUEST)
	exists (associated with	
	DUStateChangeCom-	
	plete or	
	Autonomous DUState-	
	ChangeComplete	
	methods: Update only)	

8.1.5 Retrieve primitive mapping

The Retrieve Request and Response primitives shall map to the GetParameterValues RPC. The GetParametersValue RPC is defined in TR-069 [4] as a synchronous RPC and returns a successful response or one of the following fault codes in Table 8.1.5-1.

Table 48: Table 8.1.5-1: GetParameterValues Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9003	Invalid arguments	4000
		(BAD_REQUEST)
9004	Resources exceeded	4000
	(when used in	(BAD_REQUEST)
	association with	
	SetParameterValues,	
	this cannot used to	
	indicate Parameters in	
	error)	

Fault code	Description	Response Status Code
9005	Invalid Parameter name (associated with Set/GetParameterValues, GetParameterNames, Set/GetParameterAttribu AddObject, and DeleteObject)	

8.1.6 Notify primitive mapping

8.1.6.0 Introduction The NotifyRequest and Response primitives permit notifications to AE or CSEs that have subscribed to a Resource.

While TR-069 [4] has the capability to notify the subscribed ACS when an object's parameter has been modified, TR069 [4] does not have the capability for an ACS to be notified if any parameter within the object has been modified unless the ACS individually subscribes to all the parameters of the object.

As such the procedure for mapping the Notify Request and Response primitives for TR-069 [4] is not possible unless the CSE subscribes to receive notification to all the parameters of an Object that are mapped to the Resource's attributes.

NOTE: In many implementations, subscribing to all the parameters of an Object that are mapped to the Resource can cause performance issues in the CPE as well as the CSE. As such using the attribute based subscription capabilities of TR-069 [4] for subscription of Resources should be avoided when possible.

8.1.6.1 Procedure for subscribed Resource attributes. When a <subscription> Resource for a <mgmtObj> Resource is Created, Deleted or Updated the CSE shall map to the SetParameterAttributes RPC in the following manner:

- TR-069 [4] provides the capability to subscribe to changes of a specific attribute through the use of the SetParameterAttributes RPC using the "Active" value for the Notification parameter.
- TR-069 [4] provides the capability to un-subscribe to changes of a specific attribute through the use of the SetParameterAttributes RPC using the "None" value for the Notification parameter.

The SetParametersAttributes RPC is defined in TR-069 [4] as a synchronous RPC and returns a successful response or one of the following fault codes in Table 8.1.6.1-1.

Table 49: Table 8.1.6.1-1: SetParameterAttributes Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000
		(BAD_REQUEST)
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9003	Invalid arguments	4000
		(BAD_REQUEST)
9004	Resources exceeded	4000
	(when used in	(BAD_REQUEST)
	association with	
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	
9010	File transfer failure	4000
	(associated with	(BAD_REQUEST)
	Download,	
	ScheduleDownload,	
	TransferComplete or	
	Autonomous Transfer-	
	Complete methods).	

8.1.6.2 Notification primitive mapping Notify Request and Response primitives shall map to the TR-069 notification mechanism. CPEs produce notifications for subscribed attributes using the TR-069 Inform method, the Inform method has an argument Event that has as one of the EventCodes with the value "4 VALUE CHANGE" indicating that a subscribed parameter's value has changed. The parameter(s) that have changed are included ParameterList argument of the Inform method.

The ParameterList argument is list of name-value pairs; the name is parameter name and shall be mapped to the objectPath attribute of the Resource while the value is the most recent value of the parameter.

NOTE: TR-069 CPEs do not report value changes of parameters that were modified by the ACS.

8.2 <mgmtCmd> and <execInstance> resource primitive mappings

8.2.1 Update (Execute) primitive for the <mgmtCmd> resource

8.2.1.0 Introduction When the Update Request primitive for <mgmtCmd> resource addresses the execEnable attribute of the <mgmtCmd> resource, it effectively triggers an Execute <mgmtCmd> procedure.

The Hosting CSE performs command conversion of its <excInstance> subresources. The mapping between the <excInstance> attributes and the TR-069 [4] RPC procedures triggered is based on the value of the cmdType attribute of the <mgmtCmd> resource defined in Table 8.2.1.0-1. The CPE acceptance of the corresponding RPC procedures is indicated by returning a successful Response primitive to the initial Update Request.

The Fault Codes which may be returned by the CPE to the Hosting CSE are mapped onto execResult codes and stored in the corresponding <execInstance> attributes, and are detailed in the following clauses:

Table 50: Table 8.2.1.0-1 Mapping of Execute <mgmtCmd> primitives to BBF TR-069 RPC

cmdType value	BBF TR-069 RPCs
"DOWNLOAD"	Download RPC (see clause 8.2.1.1) and TransferComplete RPC (clause 8.2.1.3)
"UPLOAD"	Upload RPC (clause 8.2.1.2) and TransferComplete RPC (clause 8.2.1.3)
"SOFTWAREINSTALL"	ChangeDUState RPC (clause 8.2.1.4) and ChangeDUStateComplete RPC (clause 8.2.1.5)
"SOFTWAREUNINSTALL"	ChangeDUState RPC (clause 8.2.1.4) and ChangeDUStateComplete RPC (clause 8.2.1.5)
"REBOOT" "RESET"	Reboot RPC (clause 8.2.1.6) Factory reset RPC (clause 8.2.1.7)

8.2.1.1 Execute File Download The download file transfer operation may use the Download mechanism defined in TR-069 [4]. The Download mechanism is an asynchronous command which returns a successful response or one of the following fault codes mapped onto execResult values as detailed in Table 8.2.1.1-1. A successful response to the Update primitive triggering the Execute procedure means that the CPE has accepted the Download RPC.

Table 51: Table 8.2.1.1-1: Download Fault Code Mapping

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no reason specified)	STATUS_REQUEST_DENIED
9002	Internal error	STATUS_INTERNAL_ERROR
9003	Invalid arguments	STATUS_INVALID_ARGUMENTS
9004	Resources exceeded (when used in association with SetParameterValues, this cannot be used to indicate Parameters in error).	STATUS_RESOURCES_EXCEEDED
9010	File transfer failure (associated with Download, ScheduleDownload, TransferComplete or AutonomousTransfer- Complete methods).	STATUS_FILE_TRANSFER_FAILED
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods, not associated with Scheduled	STATUS_FILE_TRANSFER_SERVER_AUTHENTION

Download method).

Fault code	Description	execResult Code	
9013	Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	STATUS_UNSUPPORT	ED_PROTOCOL

8.2.1.2 Execute File Upload Operations The upload file transfer operation shall use the Upload mechanism defined in TR-069 [4]. The Upload mechanism is an asynchronous command that consists of the synchronous Upload RPC for the Upload and the asynchronous TransferComplete RPC. The Upload RPC returns a successful response or one of the following fault codes mapped onto execResult values as detailed in Table 8.2.1.2-1. A successful response to the Update primitive triggering the execute procedure means that the CPE has accepted the Upload RPC in Table 8.2.1.2-1.

Table 52: Table 8.2.1.2-1: Upload Fault Code Mapping

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no	STATUS_REQUEST
	reason specified)	DENIED
9002	Internal error	STATUS_INTERNAL_ERROR
9003	Invalid arguments	STATUS_INVALID_ARGUMENTS
9004	Resources exceeded	STATUS_RESOURCES_EXCEEDED
	(when used in	
	association with	
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	
9011	Upload failure	STATUS_UPLOAD_FAILED
	(associated with Upload,	
	TransferComplete or	
	AutonomousTransfer-	
	Complete methods).	

Fault code	Description	execResult Code
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	STATUS_FILE_TRANSFER_SERVER_AUTHENTIC
9013	Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	STATUS_UNSUPPORTED_PROTOCOL

8.2.1.3 Report Results using TransferComplete RPC After a File Download or Upload has been attempted, the result of the operation is reported using the TransferComplete RPC. The TransferComplete RPC indicates a successful operation or one of the following fault codes mapped onto execResult values in Table 8.2.1.3-2.

Table 53: Table 8.2.1.3-2: TransferComplete Fault Code Mapping

Fault code	Description	execResult Code
9001	Request denied (no reason specified)	STATUS_REQUEST DENIED
9002	Internal error	STATUS_INTERNAL_ERROR
9010	File transfer failure (associated with Download,	STATUS_FILE_TRANSFER_FAILED
	ScheduleDownload, TransferComplete or AutonomousTransfer- Complete methods).	

Fault code	Description	execResult Code
9011	Upload failure (associated with Upload, TransferComplete or AutonomousTransfer- Complete methods).	STATUS_UPLOAD_FAILED
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	STATUS_FILE_TRANSFER_SERVER_AUTHENTIC
9014	File transfer failure: unable to join multicast group (associated with Download, TransferComplete or AutonomousTransfer- Complete methods).	STATUS_FILE_TRANSFER_FAILED_MULTICAST_
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	STATUS_FILE_TRANSFER_FAILED_SERVER_CO

Fault code	Description	execResult Code
9016	File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	STATUS_FILE_TRANSFER_FAILED_FILE_ACCES
9017	File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	STATUS_FILE_TRANSFER_FAILED_DOWNLOAD
9018	methods). File transfer failure: file corrupted or otherwise unusable (associated with Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete	STATUS_FILE_TRANSFER_FAILED_FILE_CORRU
9019	methods). File transfer failure: file authentication failure (associated with Download, TransferComplete or AutonomousTransfer-Complete methods).	STATUS_FILE_TRANSFER_FILE_AUTHENTICAT

Fault code	Description	execResult Code
9020	File transfer failure: unable to complete download within specified time windows (associated with TransferComplete method).	STATUS_FILE_TRANSFER_WINDOW_EXCEEDED

8.2.1.4 Execute Software Operations with ChangeDUState RPC The software installation and uninstall operations shall use the ChangeDUState mechanism defined in TR-069 [4]. The ChangeDUState mechanism is an asynchronous command that consists of the synchronous ChangeDUState RPC and returns a successful response or one of the fault codes mapped onto execResult values as detailed in Table 8.2.1.4.-1. A successful response to the Update primitive triggering the Execute procedure means that the CPE has accepted the ChangeDUState RPC.

Table 54: Table 8.2.1.4-1: ChangeDUState Fault Code Mapping

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no reason specified)	STATUS_REQUEST DENIED
9002	Internal error	STATUS_INTERNAL_ERROR
9004	Resources exceeded (when used in association with SetParameterValues, this cannot be used to indicate Parameters in error)	STATUS_RESOURCES_EXCEEDED

8.2.1.5 Report Results with ChangeDUStateComplete RPC After software installation and uninstall operations using a ChangeDUState mechanism as defined in TR-069 [4], the result of the state change operation is retrieved using the ChangeDUStateComplete RPC. The ChangeDUStateComplete RPC indicates a successful operation or one of the fault codes mapped onto execResult values as detailed in Table 8.2.1.5.-1.

Table 55: Table 8.2.1.5-1: Change DUState Complete Fault Code Mapping

Fault code	Description	execResult Code
9001	Request denied (no reason specified)	STATUS_REQUEST_DENIED
9003	Invalid arguments	STATUS_INVALID_ARGUMENTS
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	STATUS_FILE_TRANSFER_SERVER_AUTHENTIC
	methods).	
9013	Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	STATUS_UNSUPPORTED_PROTOCOL
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	STATUS_FILE_TRANSFER_FAILED_SERVER_CO

Fault code	Description	execResult Code
9016	File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	STATUS_FILE_TRANSFER_FAILED_FILE_ACCES
9017	methods). File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	STATUS_FILE_TRANSFER_FAILED_DOWNLOAD
9018	File transfer failure: file corrupted or otherwise unusable (associated with Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete	STATUS_FILE_TRANSFER_FAILED_FILE_CORR
9022	methods). Invalid UUID Format (associated with DUStateChangeComplete or AutonomousDUStateChangeComplete methods: Install, Update, and Uninstall)	STATUS_INVALID_UUID_FORMAT

Fault code	Description	execResult Code
9023	Unknown Execution Environment (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install only)	STATUS_UNKNOWN_EXECUTION_ENVIRONMEN
9024	Disabled Execution Environment (associated with DUStateChange-Complete or AutonomousDUState-ChangeComplete methods: Install, Update, and Uninstall)	STATUS_DISABLED_EXECUTION_ENVIRONMEN
9025	Deployment Unit to Execution Environment Mismatch (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Install and Update)	STATUS_EXECUTION_ENVIRONMENT_MISMATO
9026	Duplicate Deployment Unit (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Install only)	STATUS_DUPLICATE_DEPLOYMENT_UNIT
9027	System Resources Exceeded (associated with DUStateChange-Complete or AutonomousDUState-ChangeComplete methods: Install and Update)	STATUS_SYSTEM_RESOURCES_EXCEEDED

Fault code	Description	execResult Code
9028	Unknown Deployment Unit (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Update and Uninstall)	STATUS_UNKNOWN_DEPLOYMENT_UNIT
9029	Invalid Deployment Unit State (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Install, Update and Uninstall)	STATUS_INVALID_DEPLOYMENT_UNIT_STATE
9030	Invalid Deployment Unit Update - Downgrade not permitted (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Update only)	STATUS_INVALID_DEPLOYMENT_UNIT_UPDAT
9031	Invalid Deployment Unit Update - Version not specified (associated with DUStateChange- Complete or AutonomousDUState- ChangeComplete methods: Update only)	STATUS_INVALID_DEPLOYMENT_UNIT_UPDAT
9032	Invalid Deployment Unit Update - Version already exists (associated with DUStateChangeCom- plete or AutonomousDUState- ChangeComplete methods: Update only)	STATUS_INVALID_DEPLOYMENT_UNIT_UPDAT:

8.2.1.6 Execute Reboot operation The reboot operation shall use the Reboot RPC defined in TR-069 [4]. The Reboot RPC is a synchronous command.

A successful response to the Update primitive triggering the Execute procedure means that the CPE has accepted the Reboot RPC. The Reboot RPC returns a successful response or one of the fault codes mapped onto execResult values as detailed in Table 8.2.1.6-1.

Table 56: Table 8.2.1.6-1: Reboot Fault Code Mapping

Fault code	Description	execResult Code
9001	Request denied (no	STATUS_REQUEST_DENIED
	reason specified)	
9002	Internal error	STATUS_INTERNAL_ERROR
9003	Invalid arguments	STATUS_INVALID_ARGUMENTS

8.2.1.7 Execute Factory Reset operation The factory reset operation shall use the FactoryReset RPC defined in TR-069 [4]. The FactoryReset RPC is a synchronous command. A successful response to the Update primitive triggering the Execute procedure means that the CPE has accepted the FactoryReset RPC. The FactoryReset RPC returns a successful response or one of the fault codes mapped onto execResult values as detailed in Table 8.2.1.7-1.

Table 57: Table 8.2.1.7-1: FactoryReset Fault Code Mapping

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no	STATUS_REQUEST_DENIED
	reason specified)	
9002	Internal error	STATUS_INTERNAL_ERROR
9003	Invalid arguments	STATUS_INVALID_ARGUMENTS

8.2.2 Delete <mgmtCmd> resource primitive mapping

The Delete Request primitive for the <mgmtCmd> resource may initiate TR-069 [4] RPC commands for the corresponding <execInstance> sub-resources as follows:

- If there are no <execInstance> sub-resources with RUNNING execStatus, a successful response to the Delete primitive is returned and the <mgmtCmd> resource is deleted without triggering any TR-069 [4] RPCs.
- If there are <execInstance> sub-resources with RUNNING execStatus that resulted in cancellable TR-069 [4] RPCs (e.g. File Upload and File Download RPCs), a TR-069 [4] CancelTransfer RPC shall be initiated for each cancellable operation. Upon completion of all the cancellation operations, if any fault codes are returned by the CPE, an unsuccessful Response to the Delete primitive with status code "Delete mgmtCmd- execInstance"

cancellation error" is returned, and the <mgmtCmd> resource is not deleted. The execStatus attribute of each specific <execInstance> is set to CANCELLED and the execResult attribute is set to "STATUS_SUCCESS" for successful RPCs. For the unsuccessful case, execResult is determined from the RPC fault codes as detailed in Table 8.2.2-1. If all cancellation operations are successful on the managed entity, a successful Response to the Delete primitive is returned and the <mgmtCmd> resource is deleted.

• If there is at least one <execInstance> sub-resource with RUNNING execStatus that resulted in non-cancellable TR-069 [4] RPCs (e.g. RPCs other than File Upload and File Download RPCs), the execStatus attribute of the specific <execInstance> is changed to STATUS_NON_CANCELLABLE. An unsuccessful Response to the Delete primitive with status code "Delete mgmtCmd- execInstance cancellation error" is returned and the <mgmtCmd> resource is not deleted.

Table 58: Table 8.2.2-1: CancelTransfer Fault Code Mapping for Delete <mgmtCmd>

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no	STATUS_REQUEST
	reason specified)	DENIED
9021	Cancellation of file transfer not permitted in current transfer state	STATUS_CANCELLATION_DENIED

8.2.3 Update (Cancel) < execInstance > primitive mapping

When the Update Request primitive for an <code><execInstance></code> sub-resource addresses the <code>execDisable</code> attribute of the <code><execInstance></code> sub-resource, it effectively triggers a Cancel <code><execInstance></code> resource procedure.

The hosting CSE determines whether the <execInstance> resource has a RUN-NING execStatus and weather the resulting TR-069 [4] RPCs are cancellable. Currently, only the TR-069 File Upload and File Download RPCs are cancellable using the TR-069 [4] CancelTransfer RPC:

- If the addressed <execInstance> sub-resource has an execStatus other than RUNNING, an un-successful Response to the Update primitive is returned with status code "Cancel execInstance already complete".
- If the addressed <execInstance> sub-resources has RUNNING execStatus and resulted in cancellable TR-069 [4] RPCs (e.g. File Upload and File Download RPCs), a BBF TR-069 [4] CancelTransfer RPC shall be initiated. For a successful CancelTransfer RPC the execStatus attribute of the specific <execInstance> is set to CANCELLED and a successful Response is sent to the Update primitive. For a successful CancelTransfer RPC the

execStatus attribute of the specific <execInstance> is set to CANCELLED, the execResult attribute is set to "STATUS_SUCCESS" and a successful Response is sent to the Update primitive. For an unsuccessful Cancel-Transfer RPC the execResult attribute is determined from the RPC fault codes as detailed in Table 8.2.3-1 and an unsuccessful Response is sent to the Update primitive with status code "Cancel execInstance - cancellation error".

• If the addressed <execInstance> sub-resources has RUNNING execStatus and resulted non-cancellable TR-069 [4] RPCs (e.g. RPCs other than File Upload and File Download RPCs), the execStatus attribute of the specific <execInstance> is changed to STATUS_NON_CANCELLABLE. An unsuccessful Response is sent to the Update primitive with status code "Cancel execInstance - not cancellable".

Table 59: Table 8.2.3-1: CancelTransfer Fault Code Mapping for Update (Cancel) <execInstance>

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no reason specified)	STATUS_REQUEST DENIED
9021	Cancellation of file transfer not permitted in current transfer state	STATUS_CANCELLATION_DENIED

8.2.4 Delete <execInstance> primitive mapping

The Delete Request primitive for an <execInstance> sub-resource may initiate TR-069 [4] RPC commands for the corresponding <execInstance> sub-resources as follows:

- If the addressed <execInstance> sub-resource has an execStatus other than RUNNING, an successful Response to the Delete primitive is returned and the <execInstance> sub-resource is deleted without triggering any TR-069 [4] RPCs.
- If the addressed <execInstance> sub-resource has RUNNING execStatus and resulted in cancellable TR-069 [4] RPCs (e.g. File Upload and File Download RPCs), a BBF TR-069 [4] CancelTransfer RPC shall be initiated. For a successful CancelTransfer RPC a successful response is sent to the Delete primitive and the <execInstance> sub-resource is deleted. For an unsuccessful CancelTransfer RPC the execStatus attribute is determined from the RPC fault codes as detailed in Table 8.2.4-1 and an unsuccessful Response is sent to the Delete primitive with status code "Delete execInstance cancellation failed".
- If the addressed <execInstance> sub-resource has RUNNING execStatus and resulted non-cancellable TR-069 [4] RPCs (e.g. RPCs other than

File Upload and File Download RPCs), the execResult attribute is set to STATUS_NON_CANCELLABLE and an unsuccessful Response is sent to the Update primitive with status code "Delete execInstance - not cancellable".

Table 60: Table 8.2.4-1: CancelTransfer Fault Code Mapping for Delete <execInstance>

Fault code	Description	execResult Code
9000	Method not supported	STATUS_REQUEST_UNSUPPORTED
9001	Request denied (no	STATUS_REQUEST
	reason specified)	DENIED
9021	Cancellation of file transfer not permitted in current transfer state	STATUS_CANCELLATION_DENIED

8.3 Resource [myCertFileCred] primitive mappings

8.3.1 Introduction

This clause contains information regarding the procedures for establishing a certificates presented by the managed entity in order for the peer to authenticate the managed entity.

8.3.2 Creation of Resource [myCertFileCred]

8.3.2.1 Introduction The creation of a [myCertFileCred] resource requires the use of the TR-069 Download RPC to establish the credential on the managed entity. Once the managed entity has obtained the credential, the Device. Security. Certificate. {i} instance's SUIDs parameter is set from the [myCertFileCred] attribute using the TR-069 Set RPC.

8.3.2.2 Procedure for creation of Resource [myCertFileCred] The Create Request and Response primitives for Resource [myCertFileCred] that results in a download file transfer shall use the Download mechanism defined in TR-069 [4]. The Download mechanism is an asynchronous command that consists of the synchronous Download RPC for the Download and the asynchronous TransferComplete RPC. The Download RPC returns a successful response or one of the following fault codes in Table 8.3.2.2-1. A successful response means that the CPE has accepted the Download RPC.

Table 61: Table 8.3.2.2-1: Download Fault Code Mapping

Fault code	Description	Response Status Code
9000	Method not supported	4000
		$(BAD_REQUEST)$
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		$(BAD_REQUEST)$
9003	Invalid arguments	4000
		(BAD_REQUEST)
9004	Resources exceeded	4000
	(when used in	$(BAD_REQUEST)$
	association with	
	SetParameterValues,	
	this cannot be used to	
	indicate Parameters in	
	error)	
9010	File transfer failure	4000
	(associated with	(BAD_REQUEST)
	Download,	
	ScheduleDownload,	
	TransferComplete or	
	Autonomous Transfer-	
0010	Complete methods). File transfer server	4000
9012		4000
	authentication failure	(BAD_REQUEST)
	(associated with Upload, Download,	
	TransferComplete,	
	AutonomousTransfer-	
	Complete,	
	DUStateChangeCom-	
	plete, or	
	AutonomousDUState-	
	ChangeComplete	
	methods).	
	memous).	

Fault code	Description	Response Status Code
9013	Unsupported protocol for file transfer (associated with Upload, Download, ScheduleDownload, DUStateChangeComplete, or AutonomousDUState-ChangeComplete methods).	4000 (BAD_REQUEST)

Once the CPE has attempted to download the file, the CPE reports the result of the download operation using the TransferComplete RPC. The TransferComplete RPC indicates a successful operation or one of the following fault codes in Table 8.3.2.2-2.

Table 62: Table 8.3.2.2-2: TransferComplete Fault Code Mapping

Fault code	Description	Response Status Code
9001	Request denied (no	4000
	reason specified)	(BAD_REQUEST)
9002	Internal error	4000
		(BAD_REQUEST)
9010	File transfer failure	4000
	(associated with	(BAD_REQUEST)
	Download,	
	ScheduleDownload,	
	TransferComplete or	
	AutonomousTransfer-	
	Complete methods).	
9011	Upload failure	4000
	(associated with Upload,	(BAD_REQUEST)
	TransferComplete or	
	Autonomous Transfer-	
	Complete methods).	

Fault code	Description	Response Status Code
9012	File transfer server authentication failure (associated with Upload, Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9014	methods). File transfer failure: unable to join multicast group (associated with Download, TransferComplete or AutonomousTransfer- Complete methods).	4000 (BAD_REQUEST)
9015	File transfer failure: unable to contact file server (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)
9016	File transfer failure: unable to access file (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete methods).	4000 (BAD_REQUEST)

Fault code	Description	Response Status Code
9017	File transfer failure: unable to complete download (associated with Download, TransferComplete, AutonomousTransfer- Complete, DUStateChangeComplete, or AutonomousDUState- ChangeComplete	4000 (BAD_REQUEST)
9018	methods). File transfer failure: file corrupted or otherwise unusable (associated with Download, TransferComplete, AutonomousTransfer-Complete, DUStateChangeComplete, or AutonomousDUState-ChangeComplete	4000 (BAD_REQUEST)
9019	methods). File transfer failure: file authentication failure (associated with Download, TransferComplete or AutonomousTransfer-	4000 (BAD_REQUEST)
9020	Complete methods). File transfer failure: unable to complete download within specified time windows (associated with TransferComplete method).	4000 (BAD_REQUEST)

Upon successful TransferComplete notification from the CPE, the newly created Device. Security. Certificate. {i} object instance shall be assigned the values of the SUIDs attribute using the procedure for updating parameters in clause 8.1.4.

9 Server Interactions

9.0 Introduction

This clause specifies how the IN-CSE interacts with an ACS in order to manage the Resources described in the present document. The IN-CSE interaction with an ACS includes:

- Establishment of the communication session between the IN-CSE and ACS
- Processing of requests and notifications between the IN-CSE and the ACS
- Discovery

NOTE: The Broadband Forum has not defined a protocol specification for the Northbound Interface of an ACS. As such, the present document only describes the expectations of this interface in the form of requirements on the ACS.

9.1 Communication Session Establishment

9.1.1 IN-CSE to ACS Communication Session Establishment

When the IN-CSE detects that it has to delegate an interaction with a device resource to an ACS, the IN-CSE establishes a communication session with the ACS. The establishment of a communication session between the INCSE and ACS provides security dimensions for Access control, Authentication, Non-repudiation, Data confidentiality, Communication security, Data integrity and Privacy adhering to the following TR-131 [7] Architectural requirement A7.

The IN-CSE may establish multiple sessions with an ACS based on the security model utilized between the IN-CSE and the ACS.

9.1.2 ACS to IN-CSE Communication Session Establishment

When the ACS detects a change to resources it manages that the IN-CSE has expressed interest, the ACS requests the IN-CSE to establish a session if a session does not exist for the resource being managed. The establishment of a communication session between the IN-CSE and ACS provides security dimensions for Access control, Authentication, Non-repudiation, Data confidentiality, Communication security, Data integrity and Privacy adhering to the following TR-131 [7] Architectural requirement A7.

The ACS may establish multiple sessions with an IN-CSE based on the security model utilized between the IN-CSE and the ACS.

While a session between the ACS and IN-CSE is not established, the ACS retains any notifications or changes in the resources based on an Event retention policy (i.e. time, number of events).

When an ACS to IN-CSE interaction is required and a session does not exist, the ACS requests to initiate a session based on a Session Initiation Policy (i.e. Periodic

contact establishment (schedule), upon event detection with timeframe window).

9.1.3 ACS and IN-CSE Communication Session Requirements

When establishing a session from the ACS to the IN-CSE:

- If a session does not exist between the IN-CSE and ACS, the ACS shall retain any notifications or changes in the resources based on an Event retention policy (i.e. time, number of events).
- When an ACS to IN-CSE interaction is required and a session does not exist, the ACS shall be capable to initiate a session based on a Session Initiation Policy (i.e. Periodic contact establishment (schedule), upon event detection with timeframe window).

9.2 Processing of Requests and Responses

9.2.1 Request and Notification Formatting

Requests and Notifications mechanisms between the IN-CSE and the DM Server format the XML schema of the CPE methods defined in TR-069 [4] as an ACS would format the CPE methods that it would pass to the CPE. The IN-CSE would then also process the CPE methods as defined in TR-069 [4]. Likewise the ACS would send notifications in the format of the XML schema of the CPE for sending events using the Inform RPC.

9.2.2 ACS Request Processing Requirements

When receiving requests from the IN-CSE the ACS shall be capable of defining mechanisms to support triggering of immediate operations to device. If the device is not available the ACS returns an appropriate error code.

The ACS shall provide capability for the IN-CSE to indicate request policies to include: Retry policy, Request Time out.

9.2.3 ACS Notification Processing Requirements

When sending notifications to the IN-CSE:

- The ACS shall be capable of providing a mechanism for the IN-CSE to subscribe to events.
- The ACS shall be capable of providing a list of events for which the IN-CSE can subscribe.
- The ACS shall be capable of providing a mechanism for the IN-CSE to unsubscribe from events.
- The ACS shall be capable of providing an event delivery mechanism.
- The ACS shall be capable of providing the capability for the IN-CSE to request event filters including: Event Code; Specific parameters changing value; Device; Any combination of the previous criteria.

- The IN-CSE shall be capable of subscribing to be notified of changes to resources it manages.
- The ACS shall be capable of notifying the IN-CSE of changes to resources to which the client has subscribed.

9.3 Discovery and Synchronization of Resources

For devices under management, the IN-CSE may discover resources of interest (metadata and values) within a device using the ACS.

For resources of interest, the IN-CSE may also express an interest to be notified of a resource if a resource is changed (added, deleted, updated).

The IN-CSE shall be capable to discover and subscribe to changes of resources in order to synchronize the IN-CSE with resources of interest of the ACS.

9.4 Access Management

9.4.0 Introduction

Once a request has performed an Access Decision by the IN-CSE to allow the request, the IN-CSE shall select the appropriate ACS along with elements the ACS would need to implement access management within the ACS. These would include the Identity of the subject (oneM2M Originator) of the request which is needed in scenarios where the original issuer of the request is needed to be known - this could be done by correlating principals (e.g. Roles, Accounts) used by the IN-CSE and ACS.

9.4.1 Access Management Requirements

- The ACS shall be capable of providing a mechanism for the IN-CSE to discover the Access Management elements used to authorize and authenticate access to resources controlled by the ACS.
- The IN-CSE shall be capable of correlating Access Management elements provided by the ACS to Access Management elements used by the IN-CSE.
- The IN-CSE shall be capable of providing secured storage of Access Management elements within the INCSE.

10 New Management Technology Specific Resources

TR-181 [6] provides a list of management objects that have been standardized by the Broadband Forum and where possible, clause 7 provides a mapping of the Resources to standardized management objects. This clause provides the oneM2M vendor specific extensions to the TR-181 [6] data model as specified in the ts-0006-1-2-0.xml.

History

Publication history

Version	Date	Description

Draft history (to be removed on publication)

Version	Date	Description
V4.0.0	05 Jun 2019	Incorporated CR: SDS-2019-0134R01-
V4.0.1	10 Nov 2024	CSE_AE_registration_data_model_changes(R3 SDS-2024-0130-TS-0006_initial_conversion_to_markdown